

FEATURES

- Configurable input for PTC, NTC and Pot.
- Configurable output in current or voltage
- Configurable by dip-switch or PC
- High accuracy
- On-field reconfigurable
- Galvanic isolation among the ways
- UL / CE mark
- Suitable for DIN rail mounting in compliance with EN-50022 and EN-50035

GENERAL DESCRIPTION

The isolated converter DAT 4531 C is able to measure and linearise the standard PTC and NTC sensors and potentiometers. In function of programming, the measured values are converted in a current or voltage signal. The device guarantees high accuracy and performances stability both versus time and temperature.

The programming is made by the dip-switch located in the window on the side of the enclosure. By means of dip-switches it is possible to select the input type and range and the output type without recalibrate the device.

Moreover, by Personal Computer the user can program all of the device's parameters for his own necessity.

Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale .

The 1500 Vac galvanic isolation on all ways (input, output and power supply) eliminates the effects of all ground loops eventually existing and allows the use of the converter in heavy environmental conditions found in industrial applications.

The DAT 4531 C is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market.

It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

USER INSTRUCTIONS

The connections must be made as shown in the section "Connections".

It is possible to configure the converter on field by dip-switch or Personal Computer as shown in the section " Programming ". The configuration by dip-switches can be made also if the device is powered (note: after the configuration the device takes some seconds to provide the right output measure).

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)

INPUT				OUTPUT				POWER SUPPLY	
Input type	Min	Max	Min.Span	Output type	Min	Max	Min Span		
PTC				Current	0 mA	20 mA	4 mA	Power supply voltage	18 .. 30 Vdc
KTY81-210	-55°C	150°C	50°C	Voltage	0 V	10 V	1 V	Reverse polarity protection	60 Vdc max
KTY81-220	-55°C	150°C	50°C	Output resolution				Current consumption	
KTY84-130	-40°C	300°C	50°C	Current	7 uA			Current output	35 mA max.
KTY84-150	-40°C	300°C	50°C	Voltage	4 mV			Voltage output	20 mA max.
NTC				Burn-out values				ISOLATION	
Coster 10K	-10°C	100°C	50°C	Max. output value	22 mA or 10.6 V			Among all the ways	1500 Vac, 50 Hz, 1 min
Coster 1K	-30°C	40°C	25°C	Min. output value	0 mA or -0.6 V			ENVIRONMENTAL CONDITIONS	
Pot. (Rnom.< 50KΩ)	0 %	100 %	10 %	Output load Resistance - Rload				Operative Temperature	-20°C .. +60°C
Accuracy (1)				Current output	< 500 Ω			UL Operative Temperature	-10°C .. +60°C
				Voltage output	> 10 KΩ			Storage Temperature	-40°C.. +85°C
PTC, NTC	the higher of ±0.1% and ±0.2°C			Short circuit current	26 mA max.			Humidity (not condensed)	0 .. 90 %
Potentiometer	± 0.05 % f.s.			Response time (10+ 90%)				Maximum Altitude	2000 m
Linearity (1)				about 500 ms				Installation	Indoor
				± 0.1 % f.s.				MECHANICAL SPECIFICATIONS	
Sensor excitation current								Category of installation	II
								500 uA	
Thermal drift (1)									
								± 0.01% / °C	

(1)referred to the input Span (difference between max. and min.)

PROGRAMMING


CONFIGURATION BY PC

By software DATESOFT it is possible to:

- set the default programming of the device;
- program the options not available with the dip-switch; (burn-out level, etc...);
- read, in real time, the input and output measures;
- follow the dip-switches configuration wizard.


To configure the device follow the next steps:

- 1) Power-on the device.
- 2) Open the protection plastic label on the front of the device.
- 3) Connect the interface PRODAT to the PC (COM port) and to the device (PGRM connector).
- 4) Open DATESOFT.
- 5) Select the COM port in use.
- 6) Click on "Open COM".
- 7) Click on "Program".
- 8) Set the programming data.
- 9) Click on "Write" to send the programming data to the device.

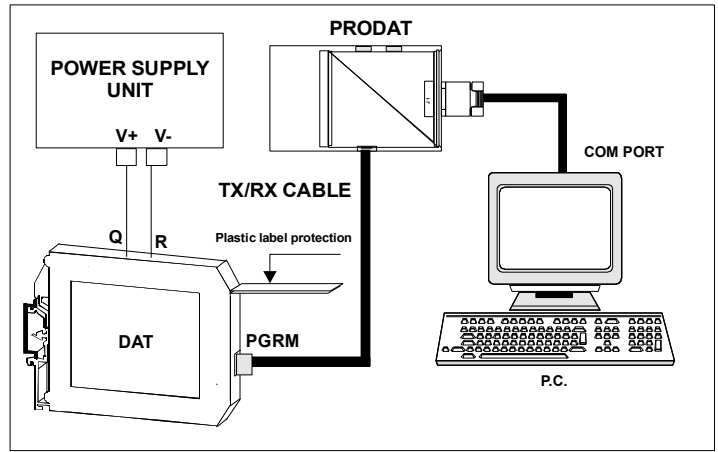


Warning: during these operations the device must always be powered and the TX/RX cable always connected.
For information about DATESOFT refer to the software's user guide.

CONFIGURATION BY DIP-SWITCHES

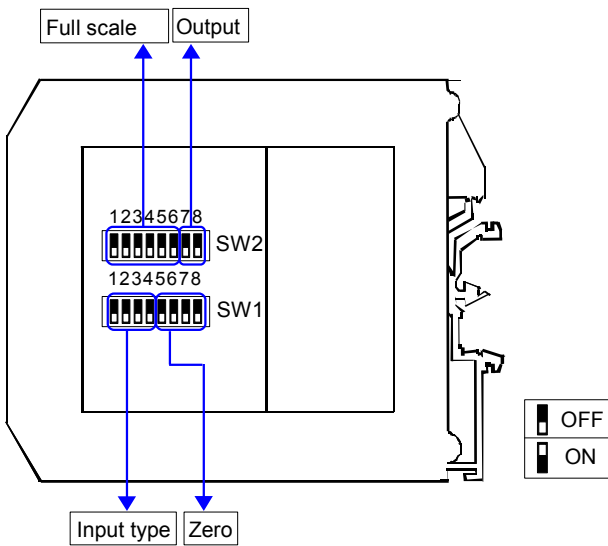

- 1) Open the suitable door on the side of the device.
- 2) Set the input type by the dip-switch SW1 [1..4] (see TAB.1)
- 3) Set the minimum input scale value (Zero) by the dip-switch SW1 [5..8] (see TAB.3)
- 4) Set the maximum input value (Full scale) by the dip-switch SW2 [1..6] (see TAB.3)
- 5) Set the output type by the dip-switch SW2 [7..8] (see TAB.2)

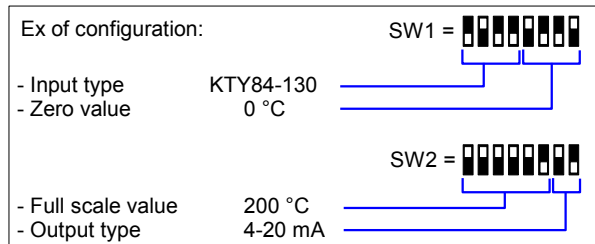

NOTE:

- It is also possible to set the dip-switches using the wizard of the configuration software following the procedure described in the section "Configuration by PC" until the step 6 and clicking on "Switch".

DIP-SWITCH CONFIGURATION TABLES

TAB.1
Input type settings

SW1	1	2	3	4	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	EPROM *
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Pot
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY81-210
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY81-220
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY84-130
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	KTY84-150
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Coster 10K
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Coster 1K

TAB.2
Output type settings

SW2	7	8	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-20 mA
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4-20 mA
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-10 V
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	0-5 V

NOTES:

* To configure the range for the input type selected (TAB.1) refer to the section of the TAB.3 on next page relative to it (ex: for Potentiometer use the table TAB.3b).

* If the dip-switches SW1 [1..4] are all set in the position 0 ("EPROM"), the device will follow the configuration programmed by PC (input type and range, output type and range and options).

* If the dip-switches SW1 [5..8] are all set in the position 0 ("Default"), the device will follow the input scale programmed by PC for the input type selected by the dip-switches SW1 [1..4]

* Eventual wrong dip-switches settings will be signalled by the blinking of the led "PWR".

TAB.3a – Settings for PTC, NTC

Zero		Full scale												
SW1 5 6 7 8		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C	SW2 1 2 3 4 5 6		°C
Default			Default			75			210			370		
-200			0			80			220			380		
-150			5			85			230			390		
-100			10			90			240			400		
-50			15			95			250			425		
-40			20			100			260			450		
-30			25			110			270			475		
-20			30			120			280			500		
-10			35			130			290			525		
0			40			140			300			550		
5			45			150			310			600		
10			50			160			320			650		
20			55			170			330			700		
30			60			180			340			750		
50			65			190			350			800		
100			70			200			360			850		

TAB.3b –Settings for Potentiometer

Zero		Full scale												
SW1 5 6 7 8		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%	SW2 1 2 3 4 5 6		%
Default			Default			34			66			98		
0			5			36			68			100		
15			6			38			70			100		
20			8			40			72			100		
25			10			42			74			100		
30			12			44			76			100		
35			14			46			78			100		
40			16			48			80			100		
45			18			50			82			100		
50			20			52			84			100		
55			22			54			86			100		
60			24			56			88			100		
65			26			58			90			100		
70			28			60			92			100		
75			30			62			94			100		
80			32			64			96			100		

INSTALLATION INSTRUCTIONS

The device is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:

When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following cases:

- If panel temperature exceeds 45°C.
- Use of high power supply value ($> 27 \text{ Vdc}$).
- Use of output current.

Make sure that sufficient air flow is provided for the device avoiding to place raceways or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel.


Install the device in a place without vibrations.

Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.


ISOLATION STRUCTURE



CONNECTIONS

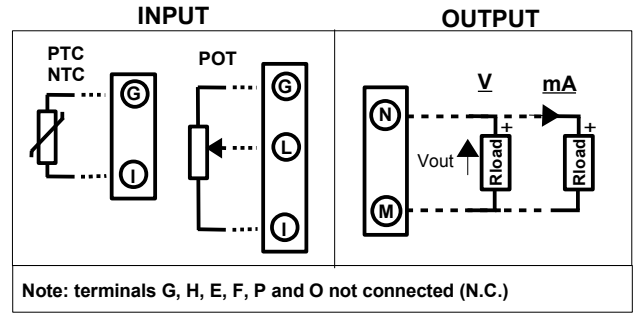

POWER SUPPLY(*)

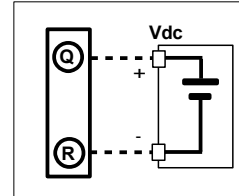


(*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV

LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered
		BLINKING	Wrong dip-switches setting

DIMENSIONS (mm)

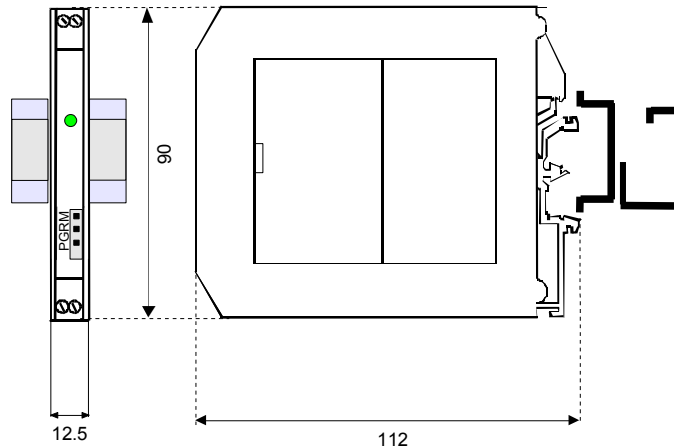

HOW TO ORDER

The device is provided as requested on the Customer's order. Refer to the section "Programming" to determine the input and output ranges. In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE:

DAT 4531C / [KTY84-130] / [0 ÷ 200 °C] / [4 ÷ 20 mA]

